

750W Power Supply with Single Output

RSP-750 series

Dimension

L * W * H 250 * 127 * 41 (1U) mm 9.84 * 5 * 1.61(1U) inch

























■ Features

- · Universal AC input / Full range
- · Built-in active PFC function
- · High efficiency up to 92%
- · Forced air cooling by built-in DC fan
- Output voltage and constant current level programmable
- Built-in remote ON-OFF control / remote sense / auxiliary power / DC OK signal
- Protections: Short circuit / Overload / Over voltage
 / Over temperature
- · Optional conformal coating
- 5 years warranty

Applications

- · Factory control or automation apparatus
- Test and measurement instrument
- · Laser related machine
- · Burn-in facility
- · RF application


■ GTIN CODE

MW Search: https://www.meanwell.com/serviceGTIN.aspx

Description

RSP-750 is a 750W single output enclosed type AC/DC power supply. This series operates for $90\sim264$ VAC input voltage and offers the models with the DC output mostly demanded from the industry. Each model is cooled by the built-in fan with fan speed control, working for the temperature up to 70° C. Moreover, RSP-750 provides vast design flexibility by equipping various built-in functions such as the output programming, remote ON-OFF control, auxiliary power, etc.

■ Model Encoding / Order Information

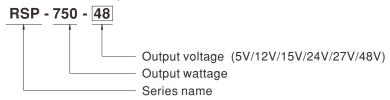





750W Power Supply with Single Output

RSP-750 series


SPECIFICATION

MODEL		RSP-750-5	RSP-750-12	RSP-750-15	RSP-750-24	RSP-750-27	RSP-750-48	
	DC VOLTAGE	5V	12V	15V	24V	27V	48V	
	RATED CURRENT	100A	62.5A	50A	31.3A	27.8A	15.7A	
	CURRENT RANGE	0 ~ 100A	0 ~ 62.5A	0 ~ 50A	0 ~ 31.3A	0 ~ 27.8A	0 ~ 15.7A	
	RATED POWER	500W	750W	750W	751.2W	750.6W	753.6W	
	RIPPLE & NOISE (max.) Note.2		150mVp-p	150mVp-p	150mVp-p	150mVp-p	150mVp-p	
OUTPUT	VOLTAGE ADJ. RANGE	4.75 ~ 5.5V	10 ~ 13.5V	13.5 ~ 16.5V	20 ~ 26.4V	24 ~ 30V	43 ~ 55V	
001101	VOLTAGE TOLERANCE Note.3		±1.0%	±1.0%	±1.0%	±1.0%	±1.0%	
		±0.5%	1 1 1					
	LINE REGULATION		±0.5%	±0.5%	±0.5%	±0.5%	±0.5%	
	LOAD REGULATION	±2.0%	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%	
	SETUP, RISE TIME	1000ms, 50ms at full load 16ms/230VAC 16ms/115VAC at full load						
	HOLD UP TIME (Typ.)							
			27 ~ 370VDC					
	FREQUENCY RANGE	47 ~ 63Hz						
	POWER FACTOR (Typ.)	0.97/230VAC						
INPUT	EFFICIENCY (Typ.)	82% 87% 89% 90.5% 90.5% 92%						
	AC CURRENT (Typ.)	5V : 5.6A/115VAC 2.8A/230VAC 12V~48V : 8.2A/115VAC 3.9A/230VAC						
	INRUSH CURRENT (Typ.)	25A/115VAC 40A/230VAC						
	LEAKAGE CURRENT	<2.0mA / 240VAC						
	OVERLOAD.	105 ~ 125% rated ou	tput power					
	OVERLOAD	Protection type : Cor	stant current limiting	g, recovers automation	ally after fault condition	on is removed		
PROTECTION	OVER VOLTAGE (OVP)	5.75 ~ 6.75V	13.8 ~ 16.8V	17 ~ 20.5V	27.6 ~ 32.4V	31 ~ 36.5V	56.6 ~ 66.2V	
	OVER VOLIAGE (UVP)	Protection type : Shu	ıt down o/p voltage, ı	e-power on to recove	er			
	OVER TEMPERATURE	Shut down o/p voltag						
	OUTPUT VOLTAGE PROGRAMMABLE(PV)	Adjustment of output voltage is allowable to 40 ~ 110% of nominal output voltage. Please refer to the Function Manual.						
	CONSTANT CURRENT LEVEL PROGRAMMABLE(PC)							
FUNCTION	AUXILIARY POWER	12V @ 0.1A; toleran	ce: ±10%					
	REMOTE ON-OFF CONTROL	Power on : short between Remote ON-OFF(pin13) & 12V-AUX(pin14) on CN50 Power off : open between Remote ON-OFF(pin13) & 12-AUX(pin14) on CN50						
	DC OK SIGNAL	The TTL signal out, p	ower supply turn on	= 0 ~ 1V; power sup	ply turn off = 3.3 ~ 5.6	V		
	WORKING TEMP.	-30 ~ +70°C (Refer to	o "Derating Curve")					
	WORKING HUMIDITY	20 ~ 90% RH non-condensing						
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH non-condensing						
	TEMP. COEFFICIENT	±0.03%/°C (0~50°C)						
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes						
	SAFETY STANDARDS	UL62368-1, CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, CCC GB4943.1, BSMI CNS14336-1, AS/NZS62368.1, EAC TP TC 004 approved						
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/F	P-FG:2KVAC O/P-I	FG:0.5KVAC				
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-	-FG:100M Ohms / 50	00VDC / 25°C / 70% R	tH			
		Parameter		Standard		Test Level / Not	e	
		Conducted		BS EN/EN55032	(CISPR32)	Class B		
	EMC EMISSION	Radiated		BS EN/EN55032	(CISPR32)	Class B		
		Harmonic Current		BS EN/EN61000	-3-2			
SAFETY &		Voltage Flicker		BS EN/EN61000	-3-3			
EMC	EMC IMMUNITY	•	S EN/EN61000-6-2	. CCC GB17625.1.G	B/T9254, BSMI CNS	13438		
(Note 7)		Parameter		Standard		Test Level / Not	e	
,		ESD		BS EN/EN61000	-4-2	Level 3, 8KV air	; Level 2, 4KV contact	
		Radiated		BS EN/EN61000		Level 3	, ,	
		EFT / Burst		BS EN/EN61000	-	Level 3		
		Surge		BS EN/EN61000			Earth ; Level 3, 2KV/Line-Line	
		Conducted		BS EN/EN61000		Level 3	Lutti , Lovoi o, Litti Lino Lino	
		Magnetic Field		BS EN/EN61000		Level 4		
		Wagnette Field		BO ENVENOTODO			riods, 30% dip 25 periods	
		Voltage Dips and Int	erruptions	BS EN/EN61000	-4-11	>95% interruptio		
	MTBF	1036.8K hrs min. Telcordia SR-332 (Bellcore) ; 109.2K hrs min. MIL-HDBK-217F (25°C)						
OTHERS	DIMENSION	250*127*41mm (L*W*H)						
	PACKING	1.64Kg; 6pcs/10.8Kg/1.1CUFT cially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.						
NOTE	Ripple & noise are measure Tolerance : includes set up Derating may be needed ur There is high possibility to t load or no load condition. It Strongly recommended that The power supply is consid	ad at 20MHz of bands tolerance, line regular nder low input voltage rigger the floating over is suggested that tur t external output capa ered a component wi	width by using a 12' tion and load regula es. Please check the er voltage protection in off the power suppacitance should not which will be installed	twisted pair-wire te- tition. derating curve for r when PV voltage is obly and set PV volta exceed 5000uF. (Or into a final equipme	rminated with a 0.1uf more details. trimmed from a high ge to the lowest level nly for: RSP-750-5) ent. All the EMC tests	& 47uf parallel capace voltage level to a low, then adjust output v are been executed b	ver voltage level at light oltage to a desired value	





RSP-750 series

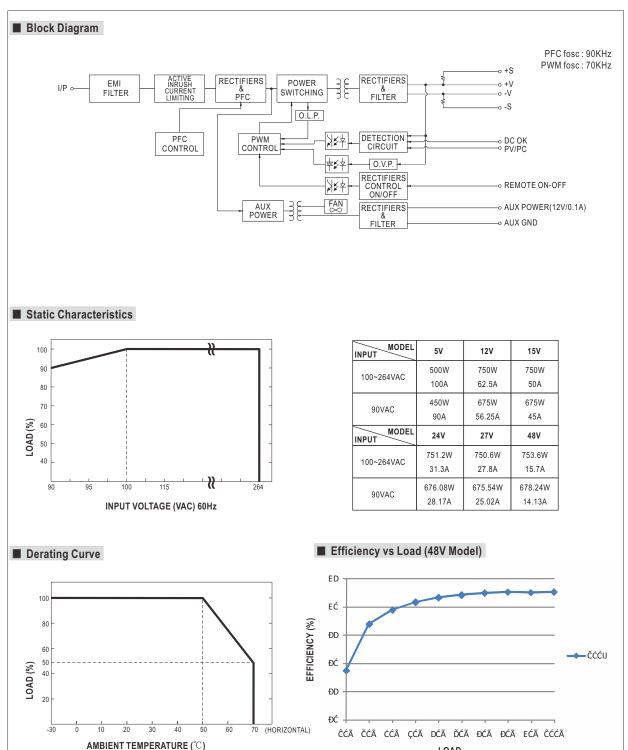

File Name:RSP-750-SPEC 2022-02-21

LOAD

** The curve above is measured at 230VAC.






RSP-750 series

■ Function Manual

1.Remote Sense

The remote sensing compensates voltage drop on the load wiring up to 0.5V.

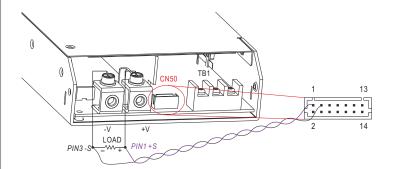

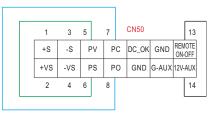
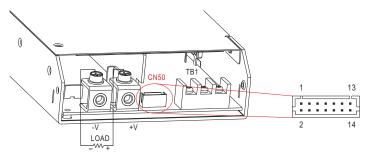


Fig 1.1

- ① The +S signal should be connected to the positive terminal of the load whereas -S signal to the negative terminal.
- © By factory default, on CN50, Remote ON-OFF (pin13) and 12V-AUX (pin14), PV(pin5) and PS (pin6), and PC (pin7) and PO (pin8, respectively, are shorted when shipped. The power supply will have no output if the shorting connector is not assembled unless certain functin needs to be activated.

2.Remote ON-OFF

※ The power supply can be turned ON/OFF by using the "Remote ON-OFF" function.



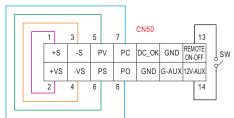


Fig 2.1

Between Remote ON-OFF(pin13) and 12V-AUX(pin14)	Power Supply Status
SW close (Short)	ON
SW open (Open)	OFF

When multiple power supplies need to turn ON/OFF simultaneously by Remote ON-OFF control, -S & -V on CN50, as well as +S & +V, on each power supply should be connected.






RSP-750 series

3. Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)

In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed to 40~110% of the nominal voltage by applying EXTERNAL VOLTAGE.

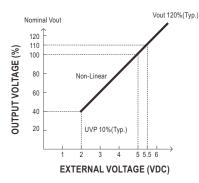

External Voltage (2~5.5VDC)

1 3 5 7 CN50 11 13

+S -S PV PC DC_OK GND REMOTE ON-OFF

+VS -VS PS PO GND G-AUX 12V-AUX
2 4 8 14


If EXTERNAL VOLTAGE (VDC) <0.5V, the power supply may enter under voltage protection; it needs to be restarted to work.

Fig 3.1

X Caution: By factory default, the Output Voltage Programming is not activated, and PV (pin5) and PS(pin6) are shorted by connector. Whenever this function is not needed to activate, as assumed in other sections' diagrams, please keep PV (pin5) and PS(pin6) shorted; other wise, the power supply will have no output.

4. Constant Current Level Programming (or, PC / remote current programming / dynamic current trim)

※ The constant current level can be trimmed to 40~110% of the rated current by applying EXTERNAL VOLTAGE.

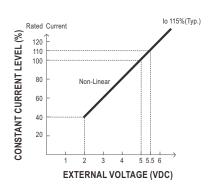


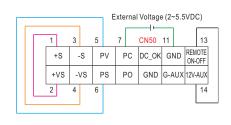


Fig 4.1

X Caution: By factory default, the Output Current Programming is not activated, and PC(pin7) and PO(pin8) are shorted by connector. Whenever this function is not needed to activate, as assumed in other sections' diagrams, please keep PC(pin7) and PO(pin8) shorted; otherwise, the power supply will have no output.





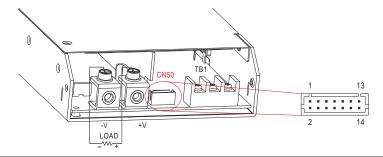


RSP-750 series

5.DC_OK signal

- * "DC_OK" is an open collector signal. It indicates the output status of the power supply. It can operate in two ways: One is sinking current from external TTL signal; the other is sending out a TTL voltage signal.
- \odot Sinking current from external TTL signal: The maximum sink current is 10mA and the maximum external voltage is 5.6V.
- O Sending out TTL voltage signal :

Between DC- OK(pin9) and GND(pin10&11)	Output Status
0 ~ 1V	Power supply ON
3.3 ~ 5.6V	Power supply OFF

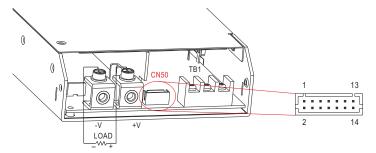

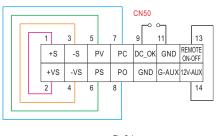


Fig 5.1





RSP-750 series

■ Mechanical Specification Case No.212A Unit:mm 3-M4 L=6 231.5 33.5 Ó þ 0 63.5 0 8 Air flow direction 127 IB IB 2 3-M4 L=4 3-M4 L=6

※ Mounting Instruction

× Mounting instruction				
Hole No. Recommended Screw Size		MAX. Penetration Depth L	Recommended mounting torque	
1	M4	6mm	7~11Kgf-cm	
2	M4	4mm	7~11Kgf-cm	

Mounting Surface Chassis of RSP-750

Mounting Screw

 $\% Control\,Pin\,No.\,Assignment\, \hbox{(CN50)}: HRS\,DF11-14DP-2DS\,or\,equivalent$



	Mating Housing	HRS DF11-14DS or equivalent		
	Terminal	HRS DF11-**SC or equivalent		

Pin No.	Function	Description	
1	+S	Positive sensing for remote sense.	
2	+VS	+VS +V Signal. The +VS should be connected to the +S to reduce the noise when "output voltage programming" function is in use.	
3 -S Negative sensing for remote sense.		Negative sensing for remote sense.	
4	-VS	-V Signal. The -VS should be connected to the -S to reduce the noise when "output voltage programming" function is in use.	
5	PV	Connect to external DC voltage source for output voltage programming, referenced to pin 10,11 (GND).	
6	PS	Reference pin regarding output voltage programming. Please refer to the Function Manual.	
7	PC	Connect to external DC voltage source for output current programming.	
8	PO	Reference pin regarding output current programming. Please refer to the Function Manual.	
9	DC_OK	Open collector signal, referenced to pin10,11(GND). Low when PSU turns on. The maximum sink current is 10mA and the maximum external voltage is 5.6V.	
10,11	GND	These pins connect to the negative terminal (-V). Return for DC_OK Signal output.	
12	G-AUX	Auxiliary voltage output ground. The signal return is isolated from the output terminals (+V & -V).	
13		Turns the output on and off by electrical or dry contact between pin 13 (ON/OFF) and pin 14 (12V-AUX). Short: Power ON, Open: Power OFF.	
14	12V-AUX	Auxiliary voltage output, 10.8~13.2V, referenced to pin 12(G-AUX). The maximum load current is 0.1A. This output is not controlled by the "remote ON/OFF control".	





RSP-750 series

 $\frak{\mathrm{MC}}$ Input Terminal Pin No. Assignment

Pin No.	Assignment	Diag	ram	Maximum mounting torque
1	AC/N		0-0-0-0	
2	AC/L	888		18Kgf-cm
3	FG ≟			

※DC Output Terminal Pin No. Assignment

Assignment	Diagram	Maximum mounting torque
+V, -V		10Kgf-cm

■ Installation Manual

Please refer to : http://www.meanwell.com/manual.html





We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Scan here and get an overview of personal contacts!



sensorsandpower.angst-pfister.com